

# DANCOVER<sup>®</sup>



Manual  
for  
Fire Bowl w/Wood Storage  
Ø93x98cm

# ASSEMBLY INSTRUCTIONS SHEET

GI232020

## Before Installation:

1. Due to the weight of the product, this product needs to be assembled by at least 2 people.
2. Please open the package carefully and check that there are no missing parts according to the parts list below before installing. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacing parts.
3. To prevent the deformation of the grill and cooking, please do not transport the grill by rolling it.
4. Please note that the corten steel rust colour can leave stains on clothing and hands, so please wear gloves and an apron when moving or using the product.
5. Please keep children, elderly people and pets away during installation and cooking.
6. The plancha needs to be placed in a flat, secure position before installation.
7. All components need to be fully tightened after assembly.
8. The wheels with brakes need to be assembled on one side of the base at all times. Keep these two wheels in a stop position when the product is not moving.
9. Do not place the product near buildings, walls, outdoor furniture, inflatable pools or other flammable items. Or nearby items could catch fire from heat or flames. Position on a non-flammable surface, clear of hanging objects.
10. DO NOT use if you suffer from heart and lung conditions because smoke inhalation may exacerbate existing conditions.
11. DO NOT move the product when it is burning.
12. DO NOT sit too close to the burning product.
13. DO NOT overfill the fire pit during use.
14. DO NOT use accelerators, petrol, lighter fuel, alcohol or similar substances to light the fire.
15. DO NOT use in inclement weather.
16. Keep flammable liquid well away from the product as some flammable liquids can catch fire from the emitting heat.
17. Keep the cooking area clear of any combustible materials. Dry leaves, paper, dry grass or pine needles can catch fire easily from the embers that come out of the product.
18. Once lit, approach the product with caution to avoid burns by fire and hot temperature from the fire pit and plancha.
19. This product is for outdoor use only.
20. Fire pit and plancha can remain hot and smoulder for a few hours after extinguishing the visible fire. Touching smouldering fire pit and plancha will cause injuries and burns.
21. Using the wrong materials inside a fire pit can be dangerous. Make sure fuel is only charcoal or wood.
22. Never leave the product unattended.
23. Never extinguish the fire by using water.
24. It is best to keep products out of the rain, especially plancha and central grill. After the fire is completely extinguished, clean it out and store it away so it does not get wet from outdoor conditions.
25. If there is a rust color skin off, it is not a product quality problem. This is a normal phenomenon. The peeling is only a layer of mask, underneath is the real stable growth of rust color.
26. Products with black paint are more sensitive to damage during setup and use.
27. Long-term exposure to high-intensity heat can cause high-temperature black paint to flake or burn off the steel. If the paint burns off and the steel is exposed to moisture, it will rust.
28. As with any outdoor steel product, periodic maintenance is required to maintain integrity and appearance. Remove rust and refinish with a paint that is suitable for high-temperature surfaces. Carefully follow the paint manufacturer instructions and ensure the paint is completely dry before using the unit again.
29. Please do not add large amount of tropical hardwood one time, as it may let cooking plate warp.
30. Ensure the unit and ashes are completely cool before cleaning. Ashes can remain hot long after a fire dies down. If you feel heat when your hand is close to the metal or the ashes, the fire pit is too hot to clean.
31. Make sure no ashes and debris from the fire pit before or after every use.
32. Once no more fire is burning and there is no danger of being burned, dispose of any remaining ash and fire fuel (coal or wood), then wipe the fire pit with soft wet cloth to black paint products. And keep products dry after cleaning.
33. DO NOT USE A CHEMICAL BASED CLEANER as this may ignite a flame and bring danger on next use.
34. The surface of this product will discolour when placed outdoor for long time. This is a natural phenomenon.
35. The one-year warranty does not cover damages or defects caused by painting and/or repairs.

## First Time Use:

1. It is very important to apply vegetable oil on plancha regularly. Use a soft cloth to apply the vegetable oil to the entire surface of the baking tray in a circular motion. As the plancha is made of steel, it may show signs of corrosion and rust over time. Therefore, in addition to clean the surface at the end of each use, it is also necessary to coat it with vegetable oil. When the plancha is used infrequently, for example in winter, we recommend applying vegetable oil every fortnight for protection against corrosion damage. The application of oil creates a protector between the air and the steel. If the steel plate comes into contact with air, the plate will rust. Rust can eventually be removed by making shavings now. We will not be responsible for poor maintenance of plancha, especially the consequences of not following maintenance rules. Any corrosion must be handled and removed by the customer.
2. Before the first grilling, plancha needs to be decreased from the factory oil coating. First, you need to heat plancha. Then drizzle with vegetable oil and allow it to mix well with the factory oil. Finally, you can wipe off the factory oil with a cloth, clean the grill pan, add fresh vegetable oil and start grilling. Please be careful not to get burned during the cleaning process.

## Part list:

NO.	Parts	Qty.
A	Grill with Support	1
B	Log Grate	1
C	Big Cooking Plate	1
D	Fire Bowl	1
E	Base Frame	2
F	Base Section	2
J	Bottom Section	1
K	Stainless steel Rails	2
I	Center BBQ Grill	1
T1	Bolt (M6x30mm)	8
T3	Bolt (M6x15mm)	12
U	Washer	4
V	Nut	4
W	Foot adjuster	4
X	Allen Wrench	1
Y	Wrench	1
Z	Poker	1

## Assembly Instructions:

**Tools required: Allen Wrench (X, Y) provided in package.**

 
 
**DO NOT FULLY TIGHTEN THE BOLTS UNTIL FULLY ASSEMBLED.**

 
 
 
1. Assemble the 4 x Foot adjuster (W) on Bottom Section (J). Use the holes in raised position. Adjust the height by screws until it's level.
2. Connect the two Base Sections (F) with two Base Frame with 8 x Bolts (T1), as the pic shows.
3. Put the assembled part on the ground. Connect the assembled part with Bottom Section with 4 x Bolts (T3).
4. Put the Fire Bowl (D). Use 4 x Bolts (T3), as the picture shows. In this part the bolts should connect Bowl (D) and Base (F).
5. Put Log Grate (B) into the bottom of Fire Bowl (D).
6. Assembly the Stainless steel Rails (K) with Base (F) by 4 x Bolts (T3), Washers (U) and Nut (V).

**PLEASE NOTE:** the rails are only for hanging tools.

**Do not use the rails to lift the product.**

7. Cover Big Cooking Plate (C) onto Fire Bowl (D).
8. Use Grill Support (A) on BBQ Cooking Plate (C) if you need.
9. Center BBQ Grill (I) will put on Grill Support (A).

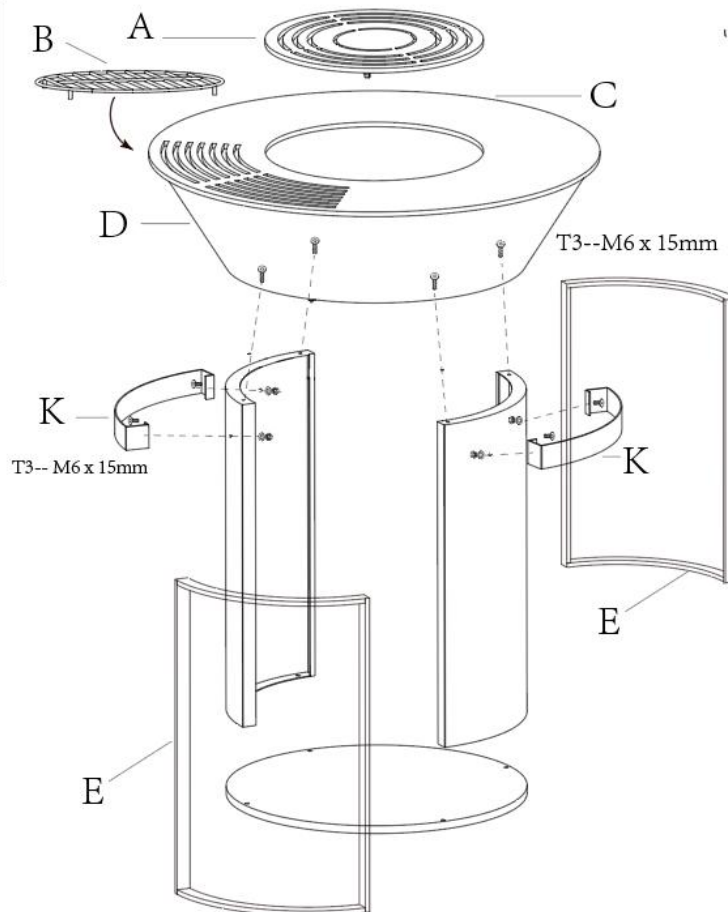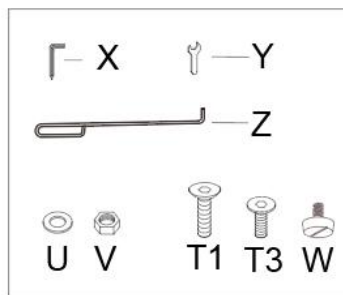

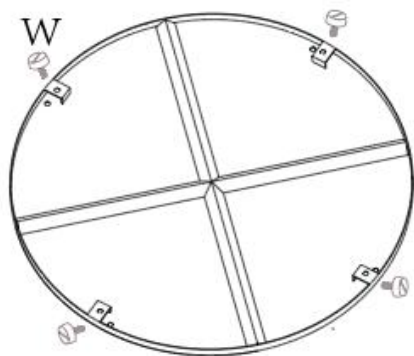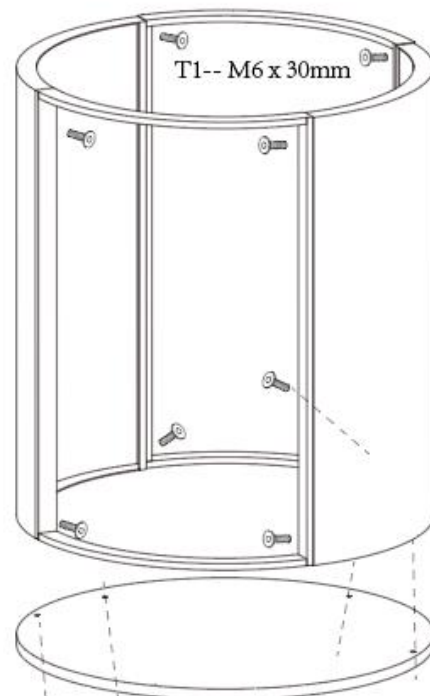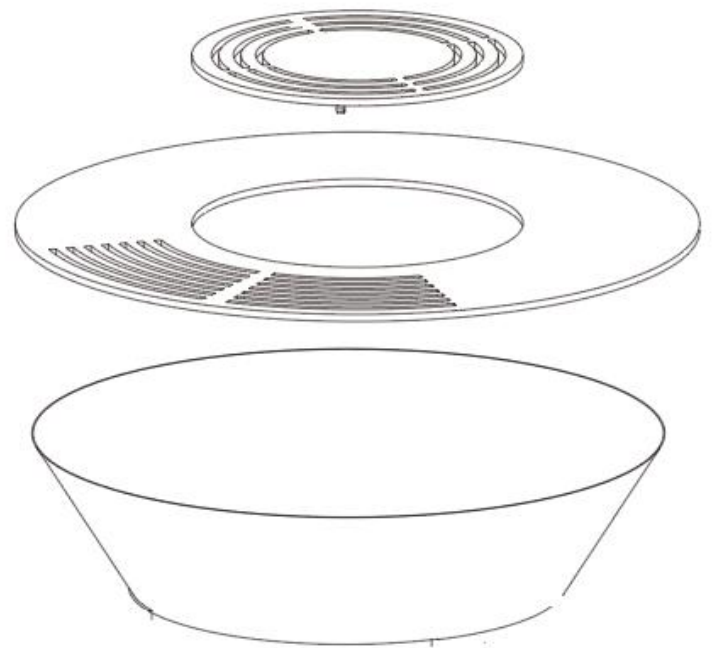

T3-- M6 x 15mm

## Contact information

Austria



Belgium



Croatia



Denmark



Estonia



Finland



France



Germany



Ireland



Italy



Latvia



Lithuania



Nederland



Norway



Poland



Portugal



Spain



Sweden



Switzerland



UK

