

DANCOVER[®]



Manual
Heater
NS-600H-EW

NS-600H



Attention:

In order to use this appliance safely please read the following instructions completely before using it. This guide is part of the product. Keep it well for future reference and hand it out when you sell or lend this product or when you give it to other people for other reasons.

Instruction for use :

1. Read all of these instructions carefully before operating the unit.
2. The heater is hot when in use, do not touch the hot surface of the heater and keep all combustible materials at least 3 feet from the heater.
3. Extreme caution is necessary when any heater is being used near children.
4. Do not leave the heater unattended when in operation.
5. Always unplug the heater when it is not in use.
6. Do not operate the heater if the plug or the power cord is damaged in any way or the unit has malfunctioned.
7. You can use this heater indoors and outdoors.
8. Do not use this heater in the immediate surroundings of a bath, shower or swimming pool.
9. When disconnecting the heater, always make sure that the controls are in the OFF position and never pull the plug by the cord.
10. Do not allow foreign objects to enter the heater as this may cause an electric shock or a fire hazard.
11. To prevent the possible risk of fire, please ensure that the heater is not covered by any objects.
12. Do not use in areas where there is petrol, paint or any other flammable liquid stored.
13. Never use the heater for anything other than its intended purpose.
14. The heater must not be directly located below a socket outlet. Always ensure that the heater has cooled fully before storing.

15. **If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.**

16. **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.**

17. **Children of less than 3 years should be kept away unless continuously supervised**

Children aged from 3 years and less than 8 years only switch on/off the appliance provided that it has been placed or installed in its intended normal

operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

CAUTION- Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

17. The heater must not be located immediately below a socket-outlet

18. Do not use the heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.

19. This heater is not equipped with a device to control the room temperature. Don't use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

WARNING: In order to avoid overheating, do not cover the heater

Operation:



1. Place the heater on a firm level surface free from obstructions and at least 3 feet away from any wall or combustible materials.
2. With the selector knob in the OFF position, plug the heater into the main supply.
3. Turn the control knob to either (Low) for 300 Watt or (High) for 600 Watt.
4. Turn the control knob fully to the (Osc) position to activate the oscillation feature.
5. Turn the selector knob to the OFF position and unplug the unit when you have finished using it.

Other Features:

The heater is equipped with a safety tilt switch which automatically shuts off the heater element if the heater is not in the upright position, the heater will resume back to normal when the heater is returned to the upright position.

If your heater fails to operate:

1. Be sure the unit is plugged into the power supply and that the electrical outlet is in working order:
2. Check for obstructions.
3. If you find any obstruction, turn the heater OFF, unplug the unit from the power supply and wait for it to cool down, carefully remove the obstruction, plug the heater into the power supply and restart the unit as described in the Operation guide.
4. If the defect persists, remove the plug from the power point and consult an authorized electrical company.

Cleaning and Storage:

We recommend that the heater is cleaned at least once a month and before storage. Turn the heater OFF, unplug the unit and allow it cool down. Use a dry cloth to clean the external surface of the heater.

DO NOT USE, WATER, WAX, POLISH OR ANY CHEMICAL SOLUTION.



This Symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority.

Contact information

Head office:

Dancover A/S
Nordre Strandvej 119 G
3150 Hellebæk
Denmark

For more information
please visit:

www.dancovershop.com

National contact

Denmark: 70 26 76 20
denmark@dancover.com

UK: 020 8099 7570
uk@dancover.com

Germany: 041 0266 7040
germany@dancover.com

France: 0975 181 800
france@dancover.com

Sweden: 040 233 262
sverige@dancover.com

Finland: 0 931 581 720
suomi@dancover.com

Poland: 22 300 8602
polska@dancover.com

Luxembourg: +49 041 0266 7040
luxembourg@dancover.com

Portugal: 308 800 899
portugal@dancover.com

Spain: 911 436 828
espana@dancover.com

Italy: 02 479 21 198
italia@dancover.com

Switzerland: 0840 000125
schweiz@dancover.com

Austria: 0662 626935
austria@dancover.com

Norway: 231 00 690
norge@dancover.com

Nederland: 0 858 880 524
nederland@dancover.com

Ireland: 0 151 33 003
ireland@dancover.com

Belgium: 0 28 08 08 09
belgique@dancover.com