DANCOVER®

Manual for Storage Shelter/Arched Tent 10x15x5,54m

Safety Advice

Attention

In some countries approval is needed to set up a tent larger than 75 m². It is your responsibility to comply with local rules and regulations and to ensure that the tent is assembled correctly.

In case of bad weather conditions, it is your responsibility to ensure the tent is safely secured and that the tent does not cause damage to others.

Do not use open fire, welding equipment or other sources which can ignite, inside or close to the tent.

The tent must be safely secured. We recommend you secure your tent with straps and pegs as soon as it is assembled.

Make sure to check if the tent is covered by your home contents insurance.

Tents must be evacuated under extreme weather conditions.

In the event of snow, always remove snow from the roof of the tent regularly to prevent snow from building on the roof, as heavy snow can cause the tent to collapse.

In the event of rain, there is a risk of rain puddles building up on top of the roof of the tent. Heavy rain puddles can cause the roof to collapse. It is your responsibility to ensure rain puddles do not build up. As a precaution, make sure the roof of the tent is stretched out properly and adequately over the side frames of the tent and remove rain water regularly.

Do not unpack or repack your tent in freezing temperatures. In case of temperatures below zero, always unpack and repack your tent indoors to avoid the risk of cracking parts.

The tent must be totally dry before you repack and store it to avoid mildew.


Note: Dancover warranty applies only to the normal use of the Product, normal wear and tear excepted, in accordance with written use instructions or manual. The warranty does not apply to damage caused by accident, abuse, misuse, or modification of the Product.


Warranty Information

Please visit dancovershop.com for information on warranty.

Please always check our website for the latest safety advice and manual.


No.	Number	Description	Element View	Weight [kg]	Amount
1	PW01689	Right Steel Welded Column the Gable End Section		54,0	1
2	PW01688	Left Steel Welded Column the Gable End Section		54,0	1
3	PW01690	Bottom Steel Welded Ridge Beam the End Gable Section		29,0	1
4	PP02312	Circular Hollow Section 40.0x2.5 / L=4464mm		10,7	1
5	TA00364	Pipe Clamp Φ40		0,1	2
6		SM12X45 DIN933-8.8OC			8
7		P12-DIN125A-OC			16
8		NM12-DIN934-8.80C			8
9		SM8X30 DIN603-8.8OC			2
10		P8-DIN125A-OC			2
11		NM8-DIN934-8.8OC	0		2

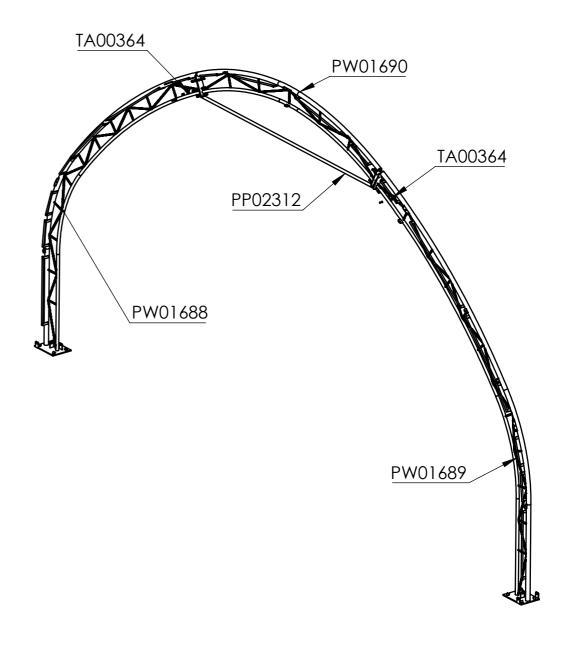


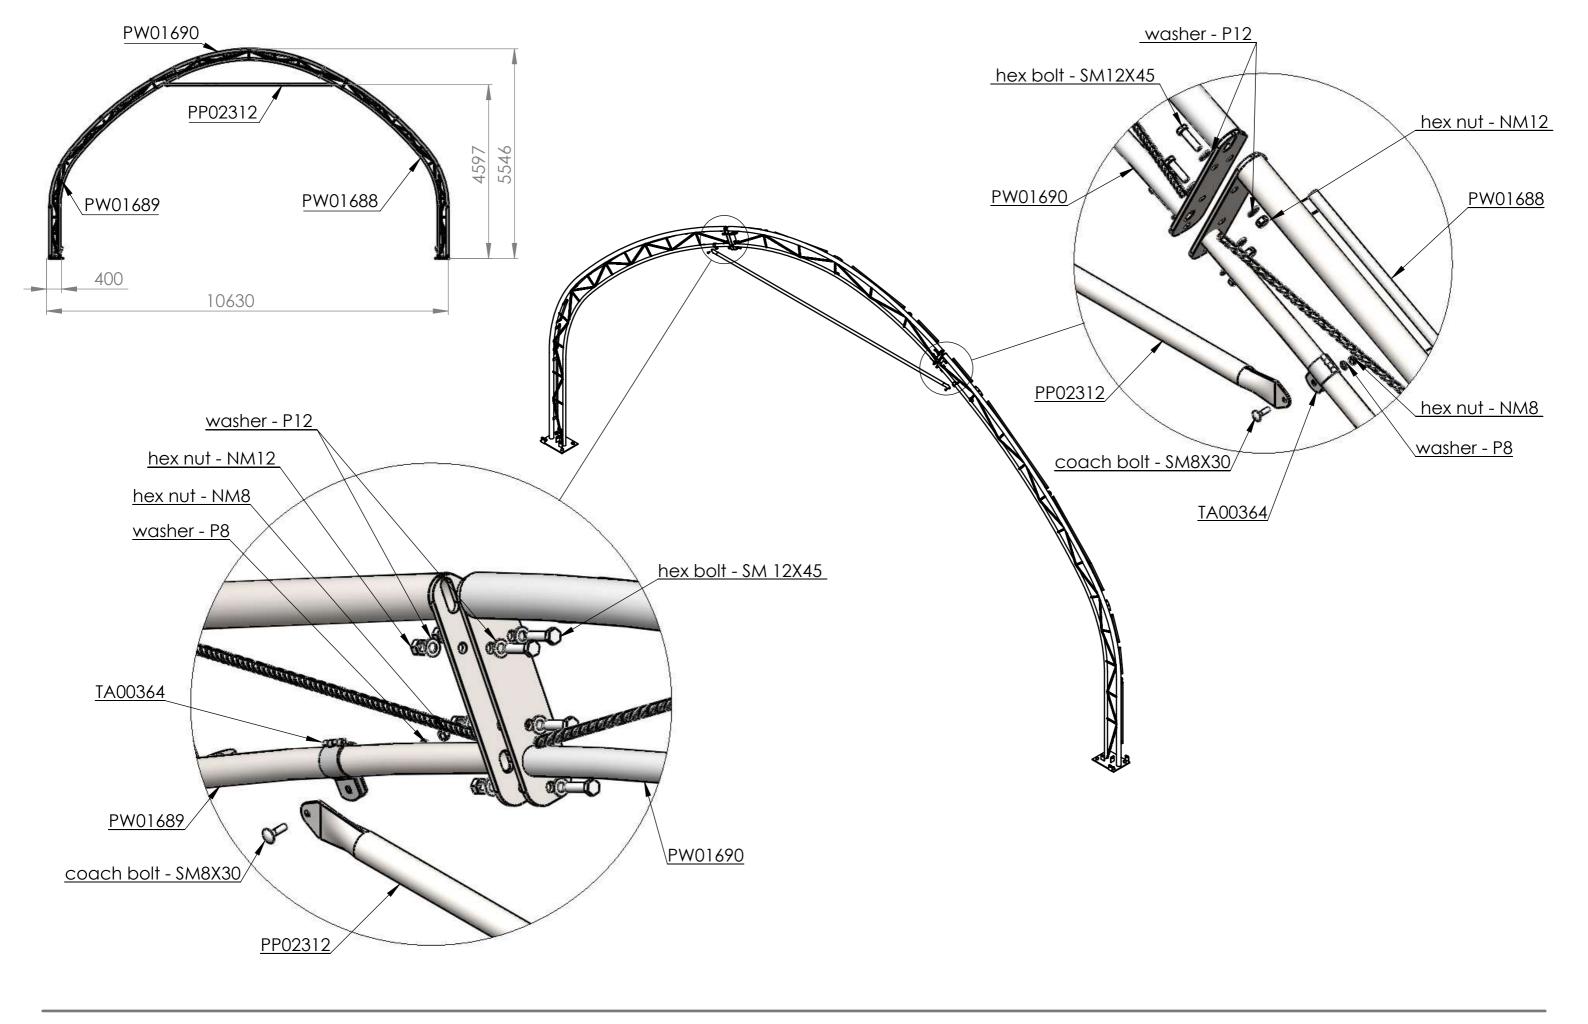


mounting instruction - gable frame


No.	Number	Description	Element View	Weight [kg]	Amount
1	PW01686	Middle Steel Welded Column		48,7	2
2	PW01687	Bottom Steel Welded Ridge Beam the Middle Gable Section		26,3	1
3	PP02312	Circular Hollow Section 40.0x2.5 / L=4464mm		10,7	1
4	TA00364	Pipe Clamp Φ40		0,1	2
5		SM12X45 DIN933-8.80C			8
6		P12-DIN125A-OC			16
7		NM12-DIN934-8.8OC			8
8		SM8X30 DIN603-8.80C			2
9		P8-DIN125A-OC			2
10		NM8-DIN934-8.8OC			2
_					

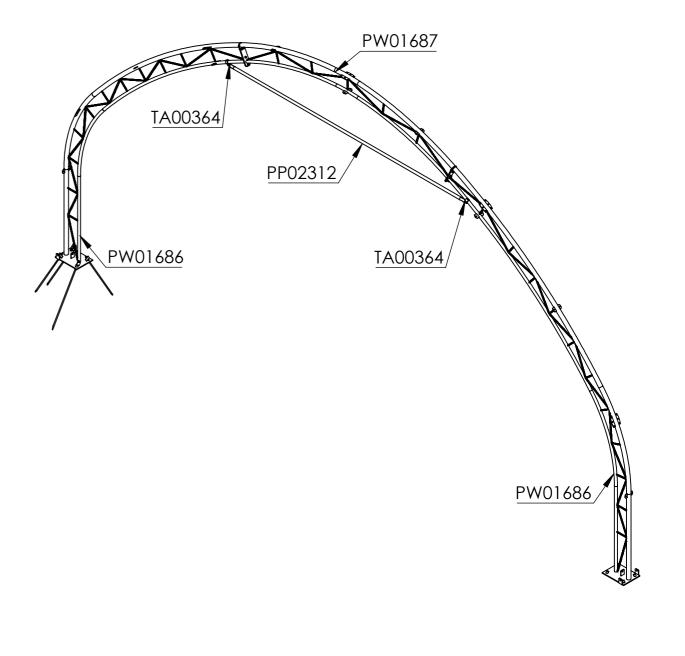

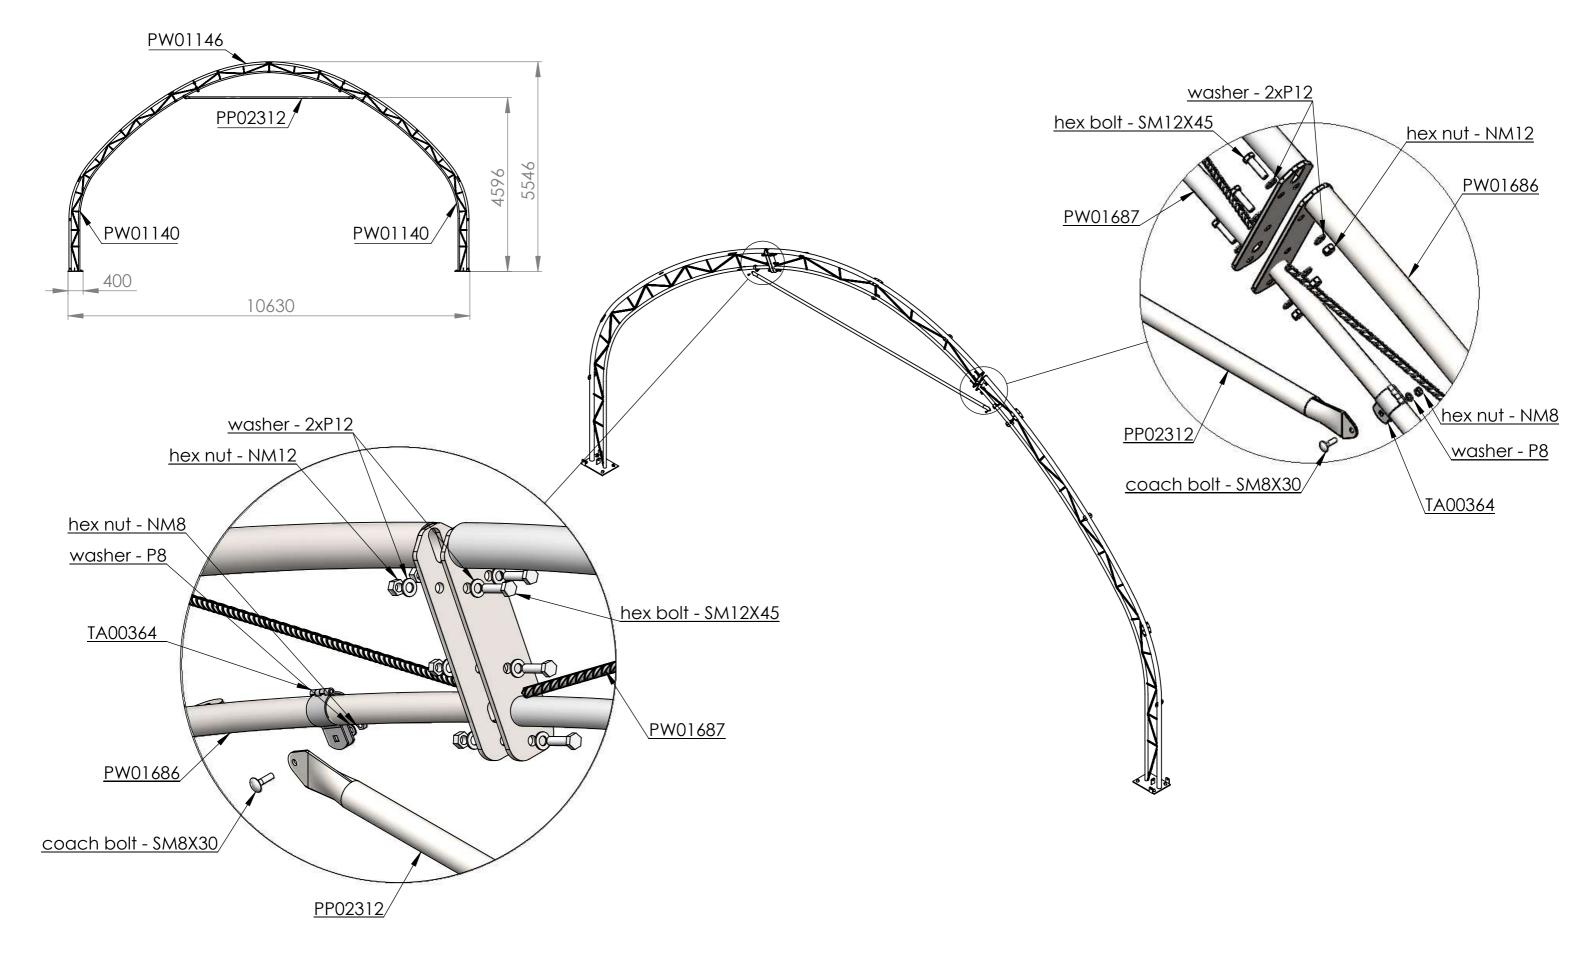


No.	Number	Description	Element View	Weight [kg]	Amount
1	PW00349	Tent Pin		1,6	80
2	PP05738	Circular Hollow Section 50.8x2.5 / L=2929mm		8,9	11
3	PP05765	Circular Hollow Section 50.8x2.5 / L=2949mm		9,0	3
4	PA00779	Side Bracing near the Ground L=3361mm	0++	3,5	4
5	PA00780	Middle Side Bracing L=3861mm	000	3,7	4
6	PA00781	Side Bracing near the Ridge L=3441mm	0++	3,4	4
7	PP07272	Steel plate 5x40x100mm		0,1	20
8	SN12 DIN 1478	Tightening screw with fork		0,6	12
9		SM10X30 DIN933-8.8OC			48
10		P10-DIN125A-OC			96
11		NM10-DIN934-8.8OC			48

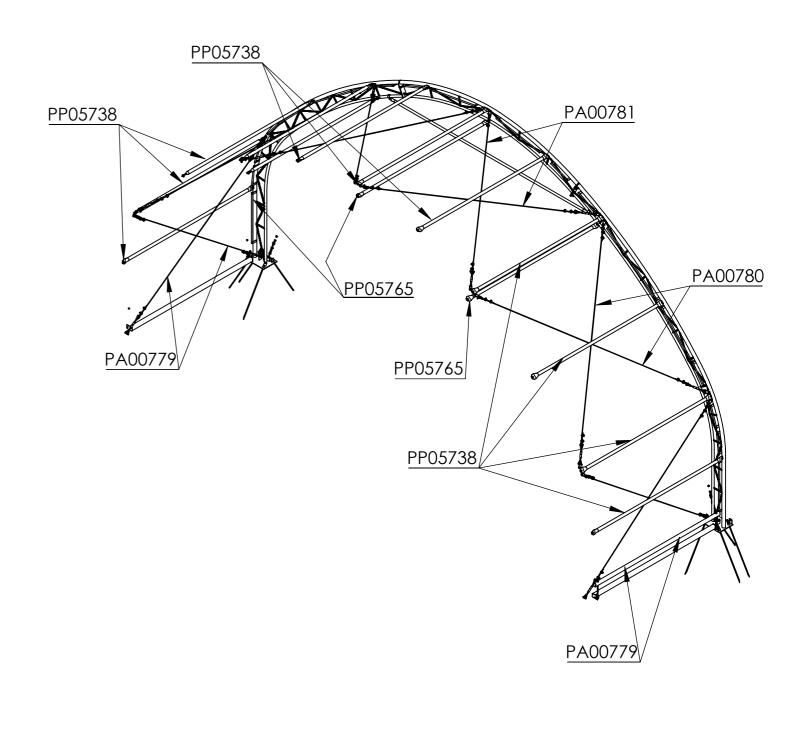

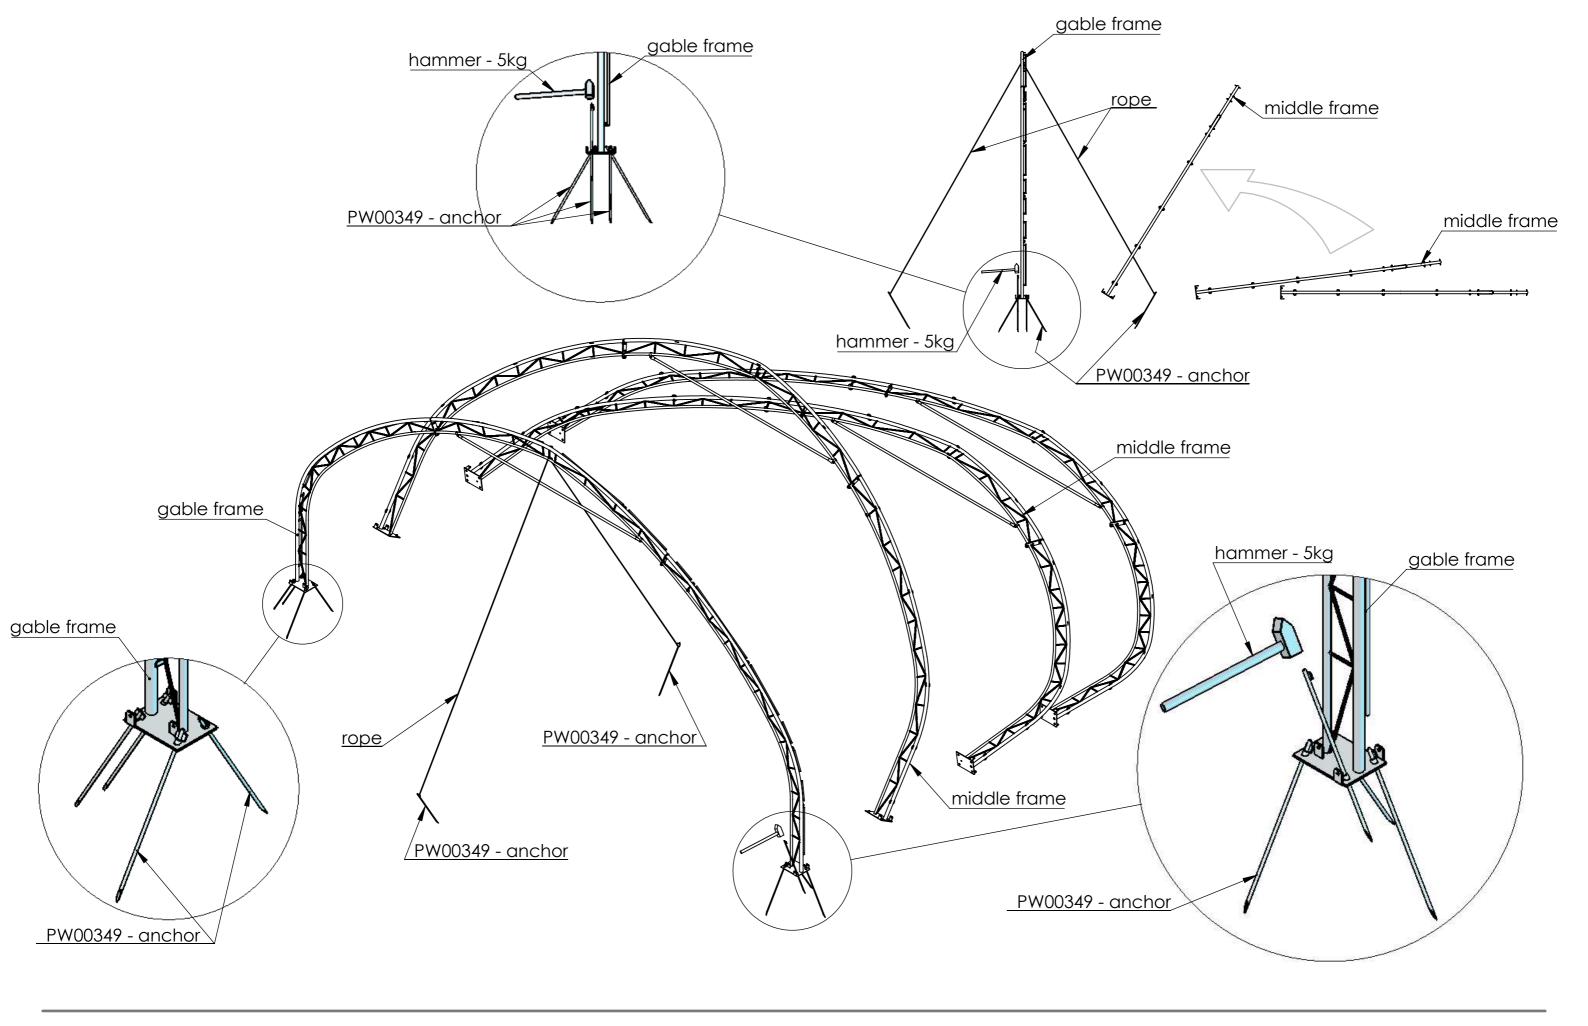



mounting instruction - mounting of struts for first section

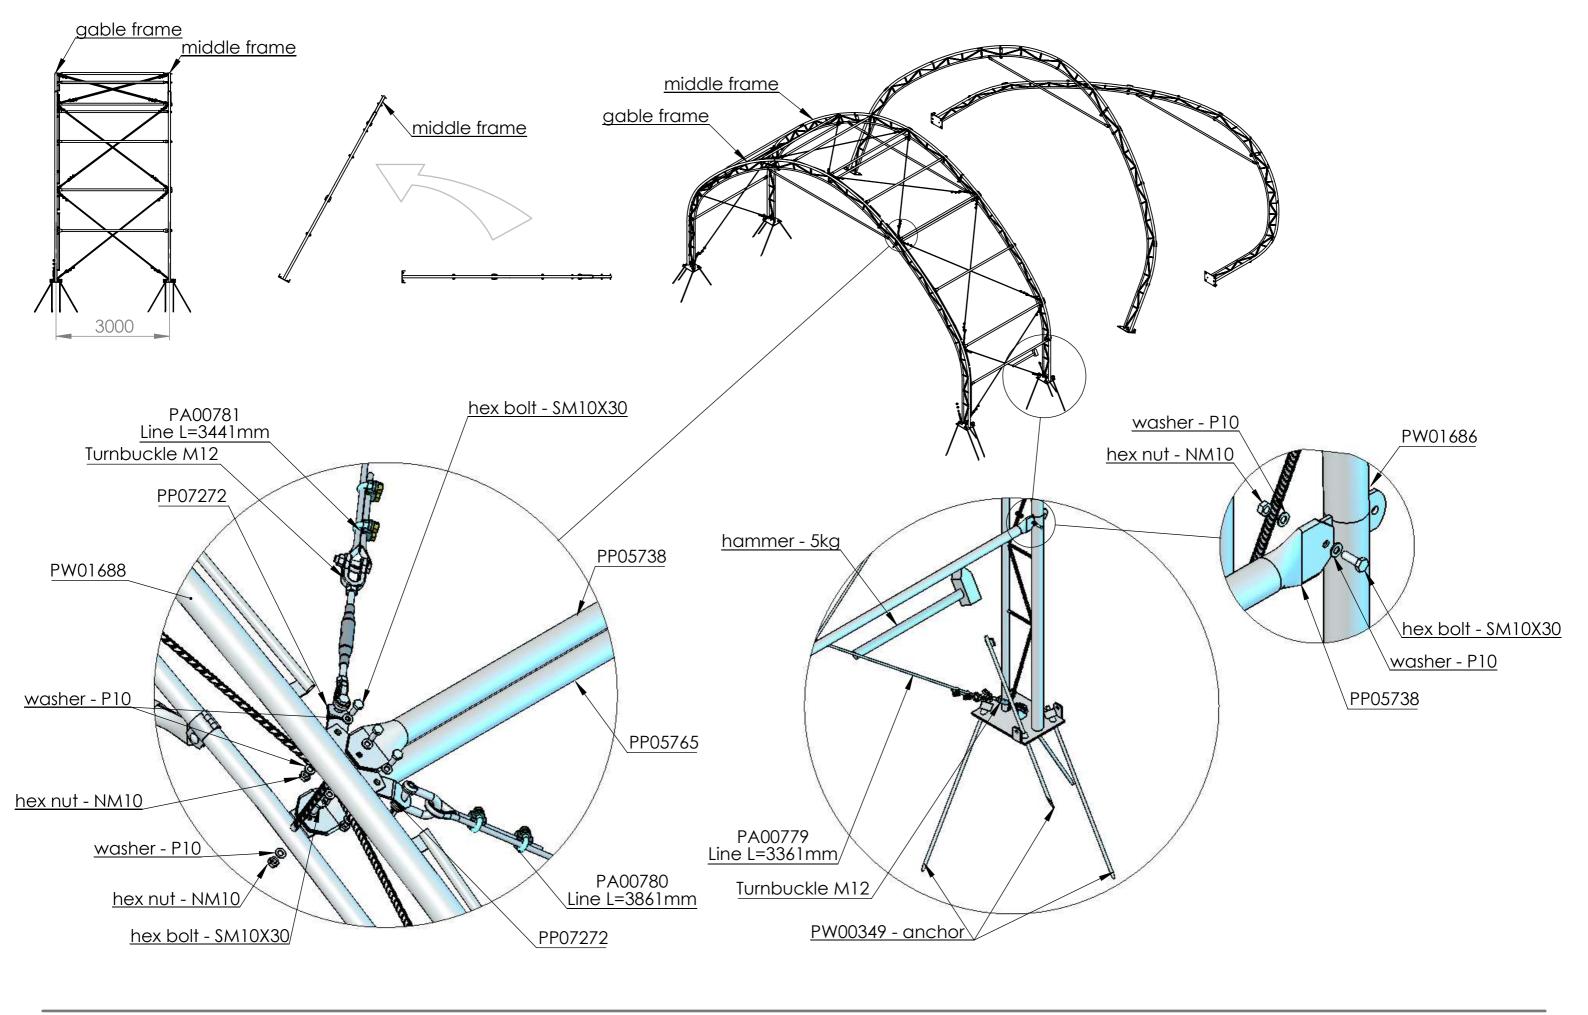


mounting instruction - mounting of struts for first section

No.	Number	Description	Element View	Weight [kg]	Amount
1	PW00349	Tent Pin		1,6	8
2	PP05738	Circular Hollow Section 50.8x2.5 / L=2929mm		8,9	11
3	PP05765	Circular Hollow Section 50.8x2.5 / L=2949mm		9,0	3
4		SM10X30 DIN933-8.8OC			28
5		P10-DIN125A-OC			28
6		NM10-DIN934-8.8OC			28

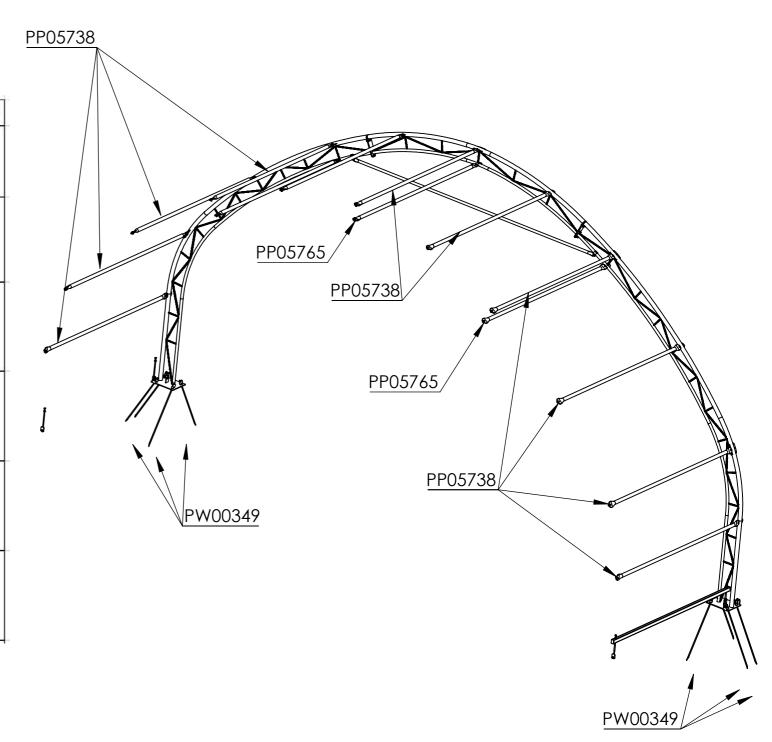


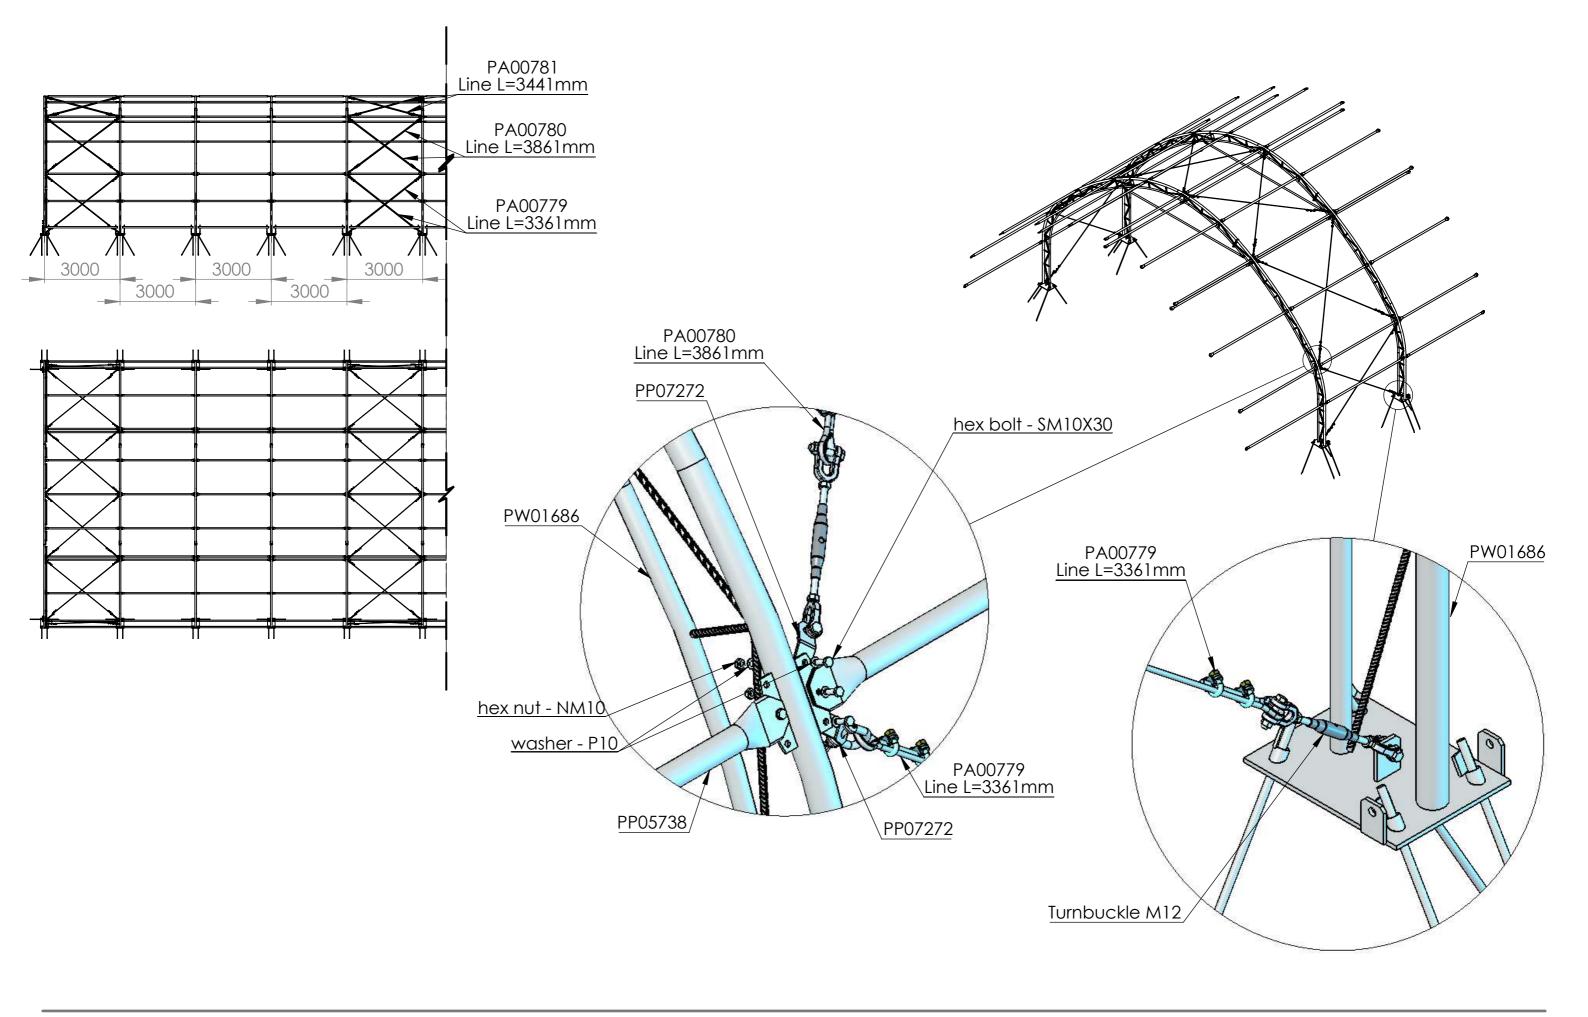


No.	Number	Description	Element View	Weight [kg]	Amount
1	PW00349	Tent Pin		1,6	8
2	PP05738	Circular Hollow Section 50.8x2.5 / L=2929mm		8,9	11
3	PP05765	Circular Hollow Section 50.8x2.5 / L=2949mm		9,0	3
4	PA00779	Side Bracing near the Ground L=3361mm	6++	3,5	4
5	PA00780	Middle Side Bracing L=3861mm	****	3,7	4
6	PA00781	Side Bracing near the Ridge L=3441mm	00+	3,4	4
7	PP07272	Steel plate 5x40x100mm		0,1	20
8	SN12 DIN 1478	Tightening screw with fork		0,6	12
9		SM10X30 DIN933-8.80C			48
10		P10-DIN125A-OC			96
11		NM10-DIN934-8.80C			48

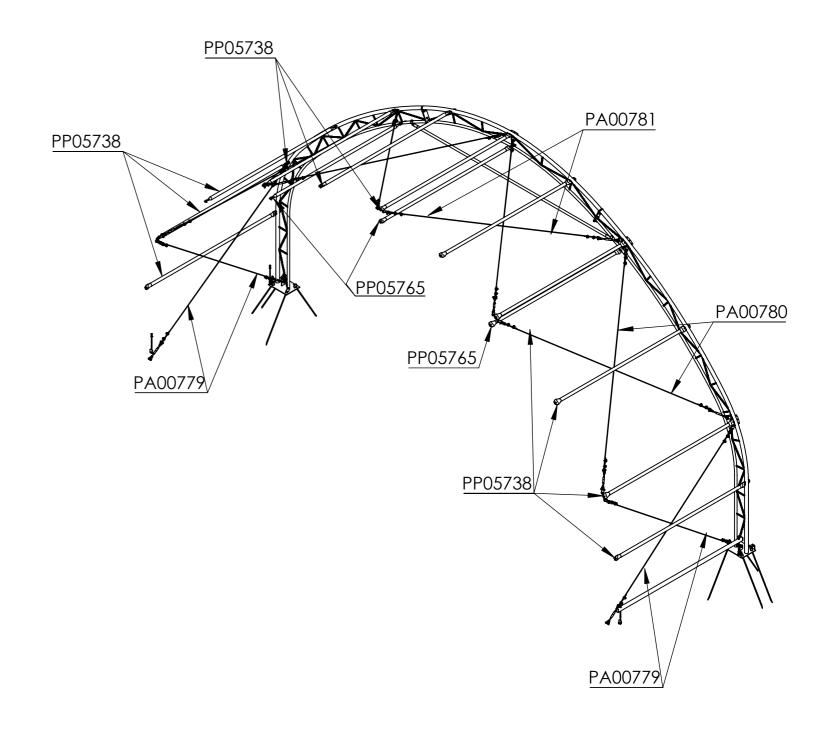



note: frame with extra struts used in the hall from 15m length

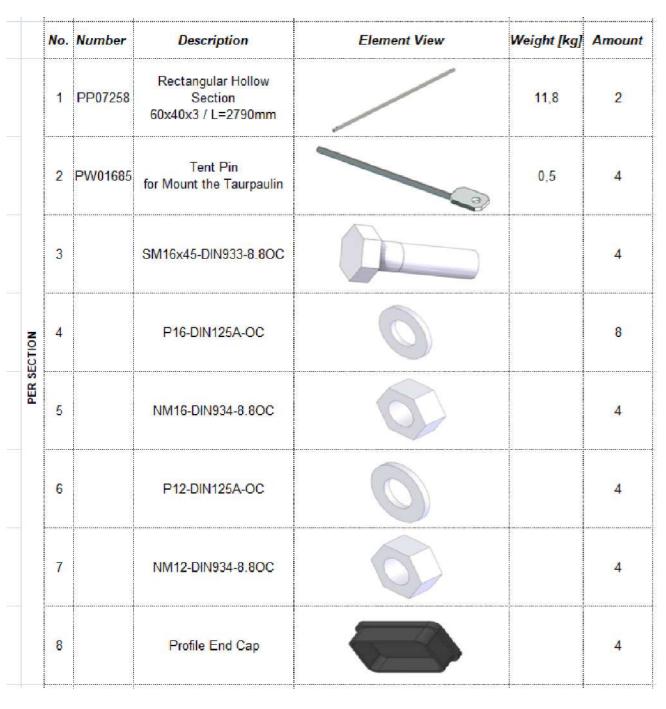

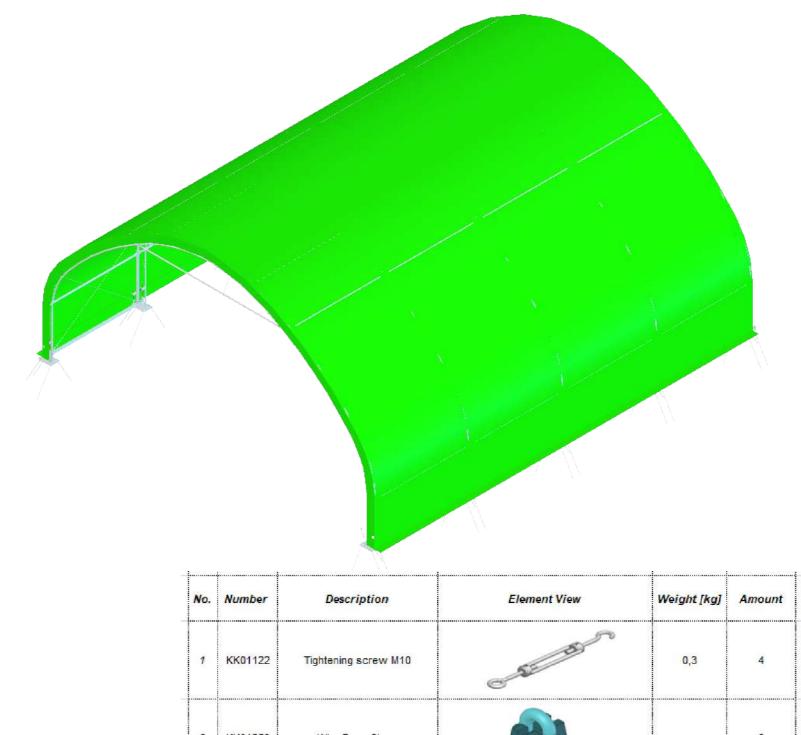

	Number	Description	Element View	Weight [kg]	
1	KK01122	Tightening screw M10		0,3	4
2	KK01259	Wire Rope Clamp			8
3		Thimble stainless			4
4		Roof Tarpaulin			1

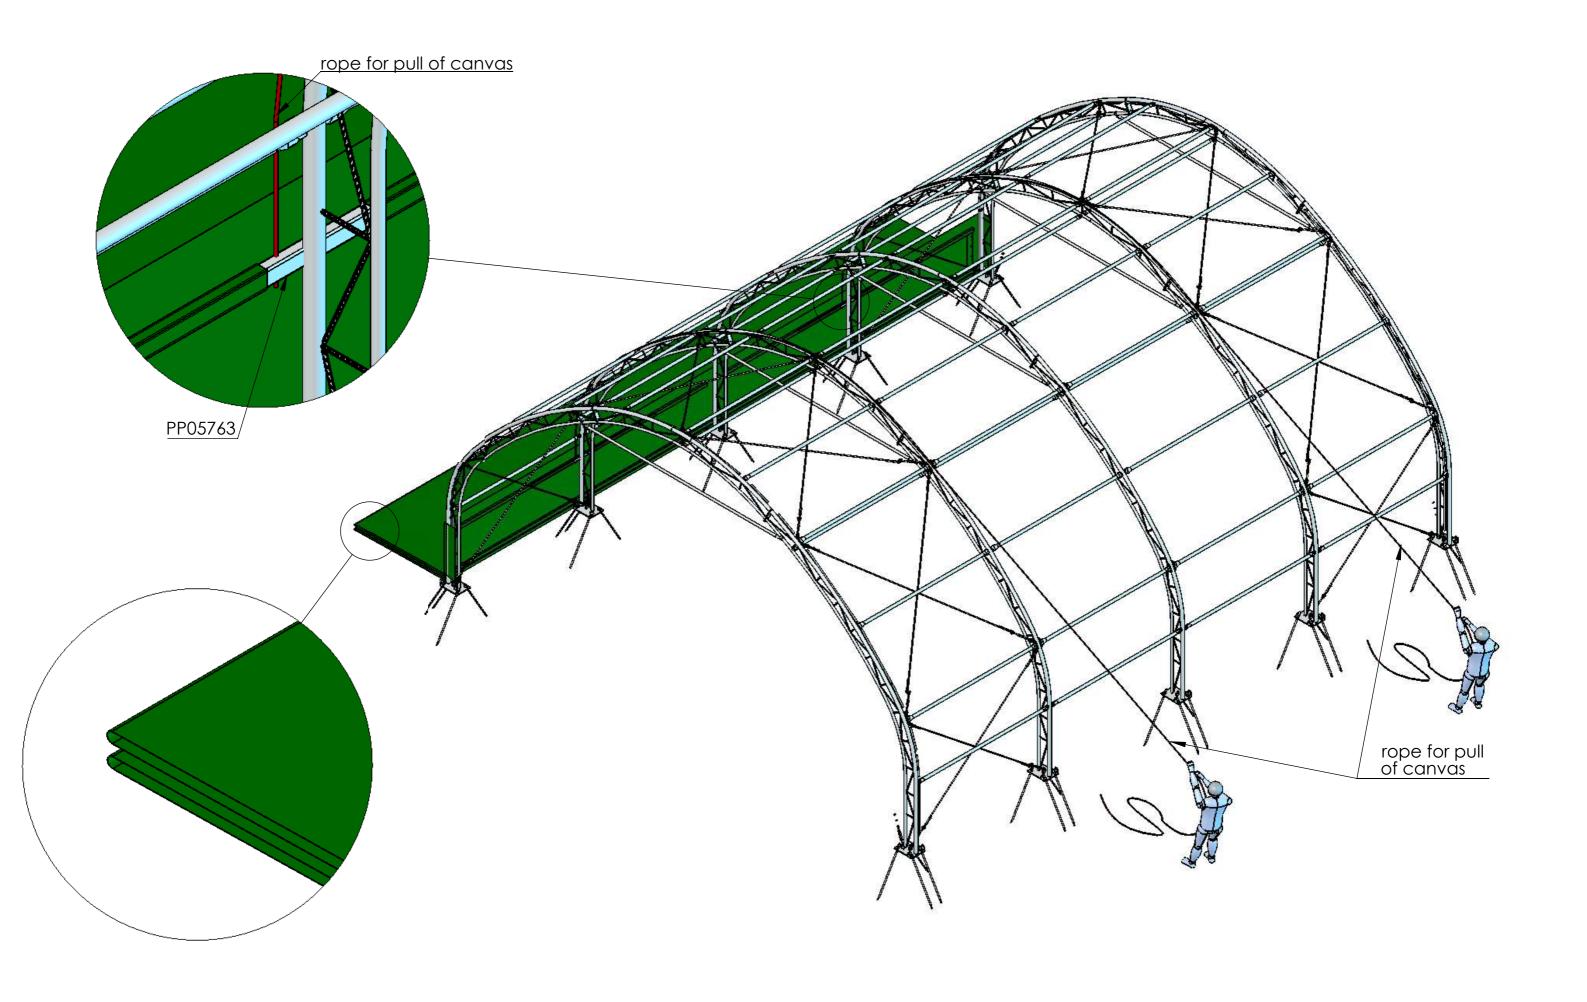

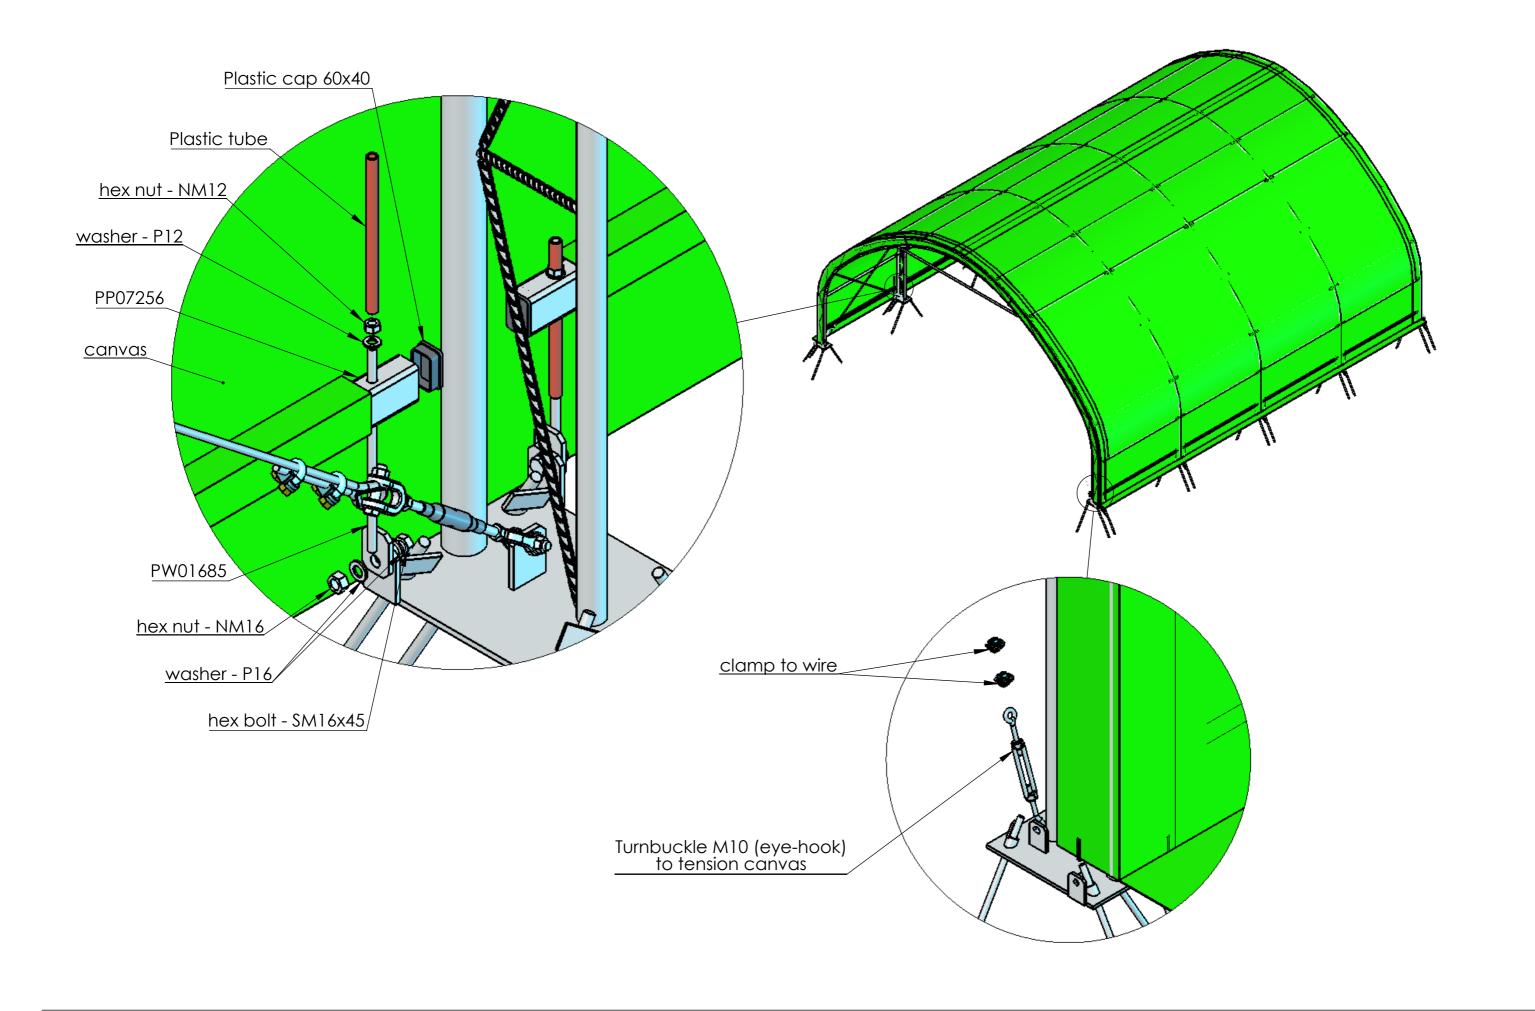

DANCOVER®

Contact information

Head office:

Dancover A/S Nordre Strandvej 119 G 3150 Hellebæk Denmark For more information please visit: www.dancovershop.com

National contact

Denmark: 70 26 76 20 denmark@dancover.com

UK: 020 8099 7570 uk@dancover.com

Germany: 041 0266 7040 germany@dancover.com

France: 0975 181 800 france@dancover.com

Sweden: 040 233 262 sverige@dancover.com

Finland: 0 931 581 720 suomi@dancover.com

Poland: 22 300 8602 polska@dancover.com

Luxembourg: +49 041 0266 7040

luxembourg@dancover.com

Portugal: 308 800 899 portugal@dancover.com

Spain: 911 436 828

espana@dancover.com

Italy: 02 479 21 198 italia@dancover.com

Switzerland: 0840 000125 schweiz@dancover.com

Austria: 0662 626935 austria@dancover.com

Norway: 231 00 690 norge@dancover.com

Nederland: 0 858 880 524 nederland@dancover.com

Ireland: 0 151 33 003 ireland@dancover.com

Belgium: 0 28 08 08 09 belgique@dancover.com